

# LATUS™

## ACOUSTIC WALL PANELS

WALL Z-CLIP

DIRECT WALL MOUNT

### INSTALLATION INSTRUCTIONS



featuring

**SOUNDPLY®**


ACOUSTIC PRODUCTS

developed and manufactured by


**NAVY ISLAND**

[www.soundply.com](http://www.soundply.com) • [sales@navyisland.com](mailto:sales@navyisland.com)  
275 Marie Ave. E, St. Paul, MN 55118 • (651) 451-4454

## SUPPLIED HARDWARE

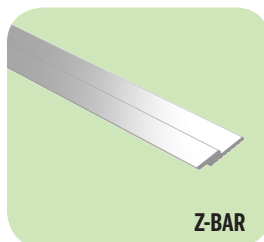

Z-BAR

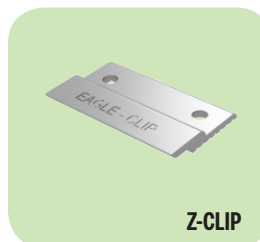

Z-CLIP



HELIX SCREW

## REQUIRED TOOLS & HARDWARE



TAPE MEASURE



MARKER



SCREW GUN



TORQUE SCREWDRIVER

BEFORE BEGINNING INSTALLATION, **OPEN AND INSPECT ALL PACKAGES** TO ENSURE ALL PARTS LISTED ON THE PACKING LIST ARE INCLUDED AND UNDAMAGED.

IF ANY ITEMS ARE MISSING OR DAMAGED, CONTACT NAVY ISLAND AT (651) 451-4454.

## Panel Preparation

If panels are sequence matched, location label can be found on the back of the panel. Sequenced panels **must** be installed according to the shop drawings. If at any point the shop drawings differ from these instructions, follow the shop drawings. If you cannot locate them, contact Navy Island for a copy before attempting to install.


Before starting installation, ensure all wet work such as taping, painting, etc. is complete.

Lay the panel face down on a soft surface and find the panel label. Orient the panel per the shop drawings to ensure correct grain direction when installed.

For edgebanding and field modifications, please see install instructions: “SoundPly Cutting & Edgebanding Instructions”

On panels larger than 16" wide place Z-clips 3" OC from each edge of the panel, a max of 36" between vertical clips and a max of 24" between horizontal clips.

On panels less than 16" wide  
Z-Clips must be 3" OC from each  
edge of the panel, or if using Z-Bar  
cut each Z-Bar 2" shorter than  
panel width.

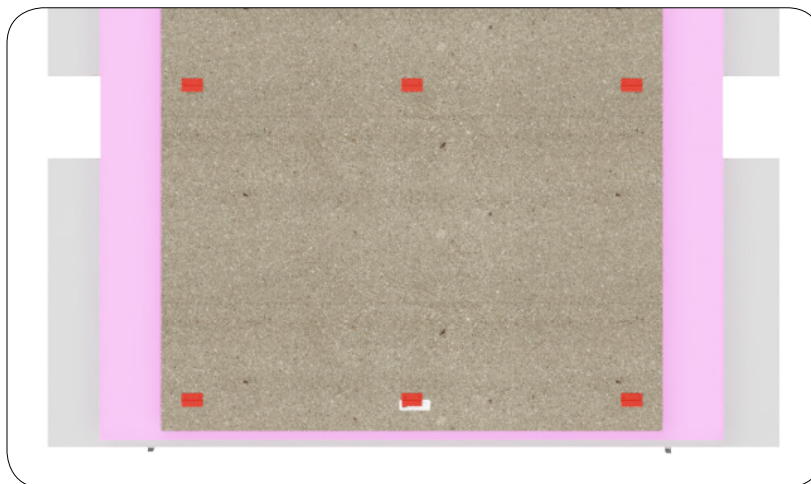[illegible]

## INSTALLATION INSTRUCTIONS

## LATUS WALL PANELS Z-CLIP

Using a low speed and the lowest torque setting, screw in each Z-clip using supplied anchor screws.

3

*To ensure that the screws are not over tightened, use a torque limiting screw driver set to no more than 6 inch-pounds.*

!

### Wall Preparation

When hanging Z-Bars, the Z-Bar should correspond with the spacing of the Z-Clips.

Anchor points on a single Z-Bar should be no more than 16" apart.

*The head of the screw fastening the Z-Bar to the wall must be flush or below the surface of the Z-Bar; otherwise the panel will not sit flush.*

4

!

### Panel Installation

Once the Z-bar and Z-clips are installed, lift panels so that the Z-Clips clear their corresponding Z-Bar. Gently press the panel into the wall and lower until Z-Clips are resting in Z-Bars.

5

